



Security Alarm

***WEATHERPROOF
MINI ALARM***

**Alarm sounds
when magnetic
contact is
separated**

**Key to arm/
disarm unit**



1-YEAR
WARRANTY

WEATHERPROOF MINI ALARM

Provides alarm security to door, window, sliding glass door, or potentially dangerous cabinet or closet.



- Easy to install
- No wiring
- Uses 3 LR44 button cell batteries (installed)

INSTALLATION

- 1. Position alarm** on the stationary edge of the door or window frame and mount it to the frame using double-sided, pressure sensitive tape.
Note: Make sure mounting surfaces are free of dust, oil and other substances that could affect adhesion.
- 2. Mount** the magnet at the edge of the door or window, so that the magnet and the alarm arrows align with each other. Use spacers, if necessary, to bring the alarm and magnet into correct alignment.

OPERATION

- 1.** Remove key, located on top of alarm, to arm unit.
- 2.** When door or window is opened, alarm will sound for 90 seconds.
- 3.** Insert key to disarm unit.

Carlon[®]

25701 Science Park Drive
Cleveland, Ohio 44122
www.lamson-sessions.com

Made in China
©2004 LAMSON & SESSIONS
0404 SR4315

